




Box 459 - Rosemount, MN 55068

Phone 800-328-0953

Fax 800-334-8823

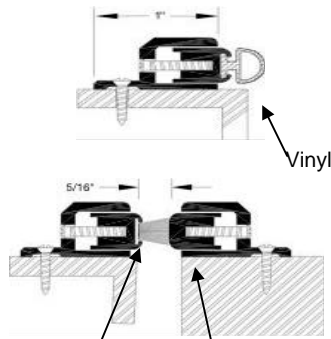

95CP Pile Bumper 95C Solid Bar

Adjustable Astragal Part # 95, 95P 95V

1. Spacing between doors should be 5/16" minimum to 9/16" maximum.
2. Measure the height of the door and cut the two pieces of adjustable astragal to equal the height.
3. Fasten the astragals to the doors with the screws furnished. The housings should be flush with the edge of the doors as illustrated above.
4. To adjust the gasketing material it is necessary to compress the bar into the housing and then while holding it firmly turn the adjustment screw in or out. This is necessary because the adjustment screws have two small teeth on the bottom side of the head that must be disengaged. These teeth are designed to keep the screws from getting out of adjustment.



Positive Pressure Tested Gasketing Material for Fire Doors. Intended for Application to/with listed steel frames and/or classified steel covered composite, hollow metal type fire doors rated up to 3 hours, wood and plastic covered composite type fire doors rated up to 1-1/2 hours, and wood core type fire doors rated up to 20 minutes.
Meets UL10B, UL10C and UBC 7-2 (1997) Category J 17L5